


Retractable Door Installation




Before Starting Installation:

- Check for all components
- Read instructions carefully
- Save instruction sheet for later reference

Retractable Door Components:

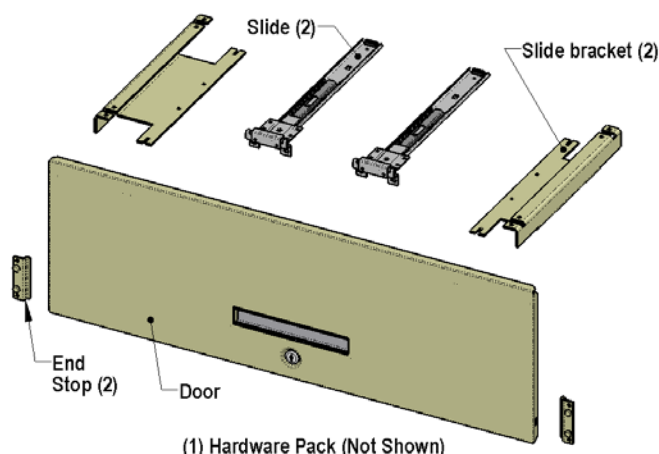

Tools Required:

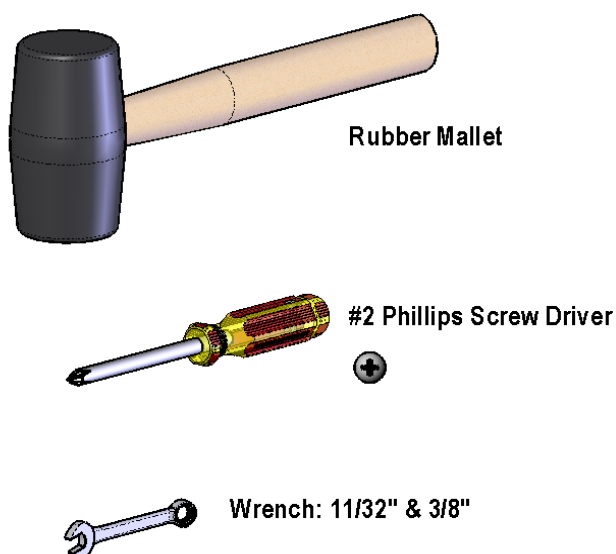

Installation:

1. Install the shelf supports into the uprights with the center to center spacing of the door height plus 1 inch. Then install the shelf. (See Fig.1)

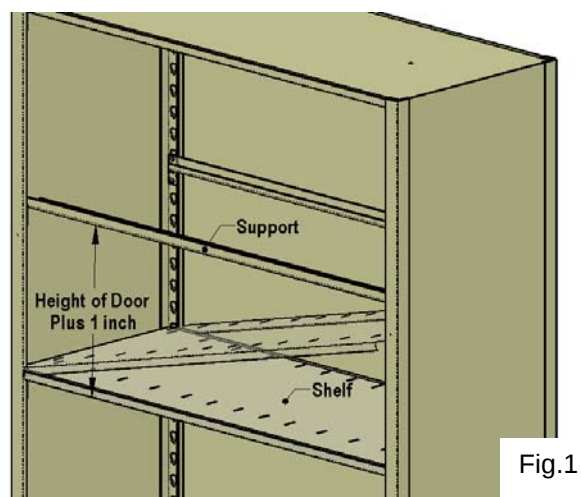


Fig.1

2. Attach the slides to the slide brackets, Fig.2, using the supplied #8-32 x 3/8" screws and nuts. The head of the screw must be installed inside of the slide. Use the two holes at the front of the slide and the one at the rear of the slide. There should be one right hand and one left hand assembly.

Note: Double entry units are supplied with a bracket that (2) slides are attached to.

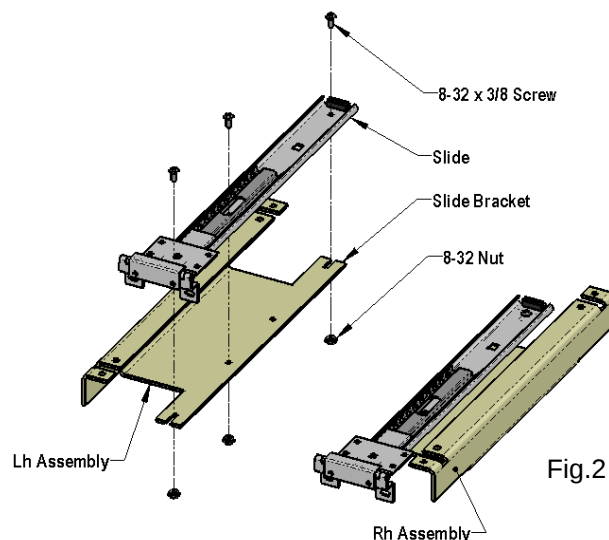


Fig.2

Attach the bracket assembly to the shelf supports, making sure bracket flange is on the top of the support. Using two (2) #10-32 x 1/2 self clinching bolts, nuts, and lock washers on each bracket. (See Fig.3) Repeat for the opposite side.

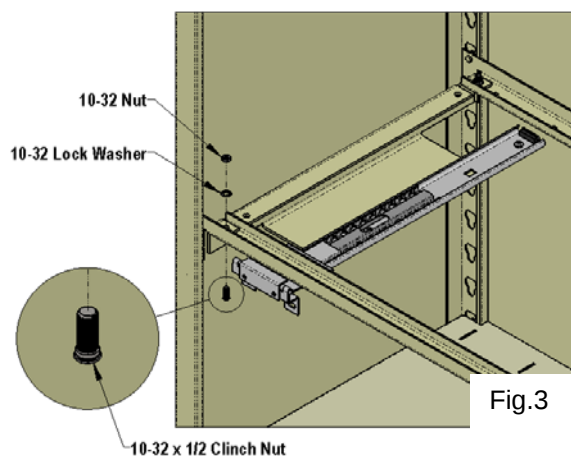


Fig.3

3. Install the end stops into the upright. Leave one full keyhole slot between the end stop and the shelf. (See Fig.4)

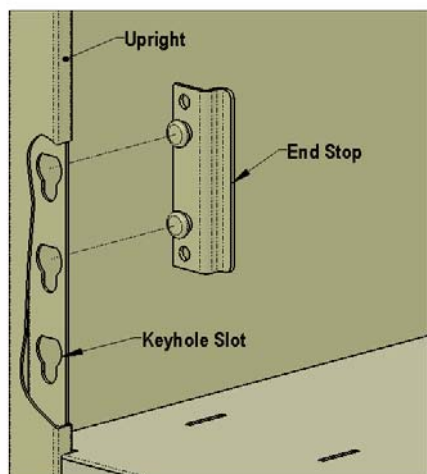


Fig.4

4. Attach the door panel to the slide using (2) 10-12 x 1/2" hex washer head screw. Push the slides and door part way back into the shelving unit to help support the door while inserting the screw in the door. Do not tighten screw all the way. (See Fig.5)

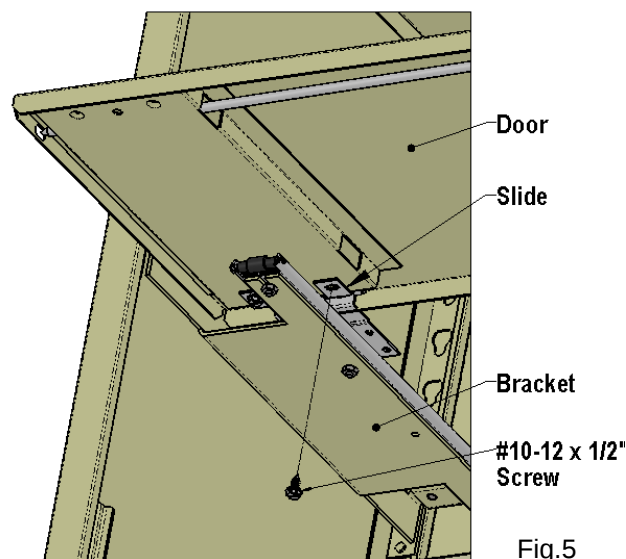


Fig.5

5. After the four screws have been installed, close the door and center the door left to right between the uprights then open the door and then tighten the screws. (See Fig.6)

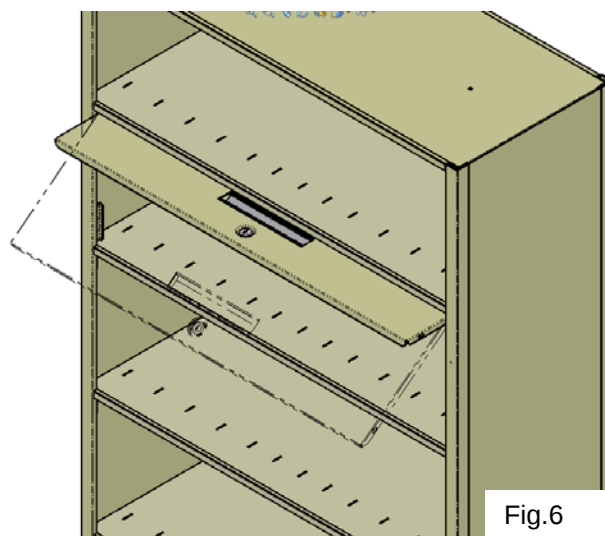


Fig.6

6. If the door is supplied with a lock, check the operation and make any adjustments if needed.